



1340 North Melrose Drive, Vista, CA 92083
Phone 951-587-9222 Fax 760-758-5991
Email: info@motoworks.com

SR4 4 Stroke Carbon racing system
Part # 61-6000
2008 Can-Am DS 450

Exhaust kit bill of materials

1	Instruction sheet	
1	Tailpipe with SR4 muffler	61-6000
1	8mmx1.25x70mm flange bolt	70-100-89
1	SA2 Aluminum spacer 8mm x 25mmx32mm	SA1
1	Spark arrestor	75-100-01
2	Motoworks stickers	07-1002

Caution: LET MOTORCYCLE COOL DOWN AT LEAST 1 HOUR BEFORE BEGINNING INSTALLATION.

Note: READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.

Removal of the stock exhaust,

1. Unbolt midpipe of stock exhaust and set hardware aside. (Fig 1)
2. Unbolt upper portion of exhaust, remove stock muffler and set hardware aside. (Fig 2)
3. Remove spacer and rubber grommet from lower and upper brackets. (Fig. 3&4)

Installation Motoworks exhaust

1. Install spacer and rubber grommet in the lower and upper brackets of the Motoworks SR4 exhaust.
2. Install Motoworks tailpipe with muffler using supplied bolt, stock washer, supplied spacer and stock nut on upper rear mount (the flush side of the supplied spacer in place in between the bracket and fender bracket), use stock bolt, stock washer and stock nut on lower mount finger tight at this point. (Fig 5-7)
3. Torque tailpipe mounting bolts to 2.5 kg-m (18 lb-ft)
4. **Re-check all your work**

5. We recommend that you clean the entire exhaust system with a mild detergent, i.e. glass cleaner prior to starting as any oily residue may cause permanent staining.
6. Before operating check for proper clearance between Motoworks exhaust and ATV i.e. frame, plastic, brake line, fuel line etc if problems exist re-check work

Jetting Specifications

Purchase Motoworks FMI and install.

Note: It is normal for the new exhaust to emit white smoke the first time you start the ATV. This is from the oil used during manufacturing.

Figure 1



Figure 2

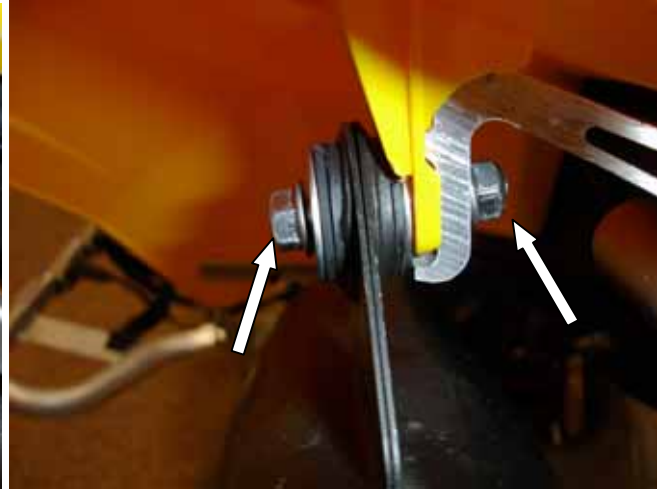


Figure 3



Figure 4



Figure 5



Figure 6



Figure 7

